

B (1:25)

Tank overpressure & underpressure device (PRV)
Overpressure protection triggering at +6mbar
Underpressure protection triggering at -1mbar



A (1:25)

Gas Blower

Gas Blower

Condensation Trap / Underpressure Protection
Underpressure protection triggering at -1.5mbar

Gas network normal operating
pressure is 4.5mbar

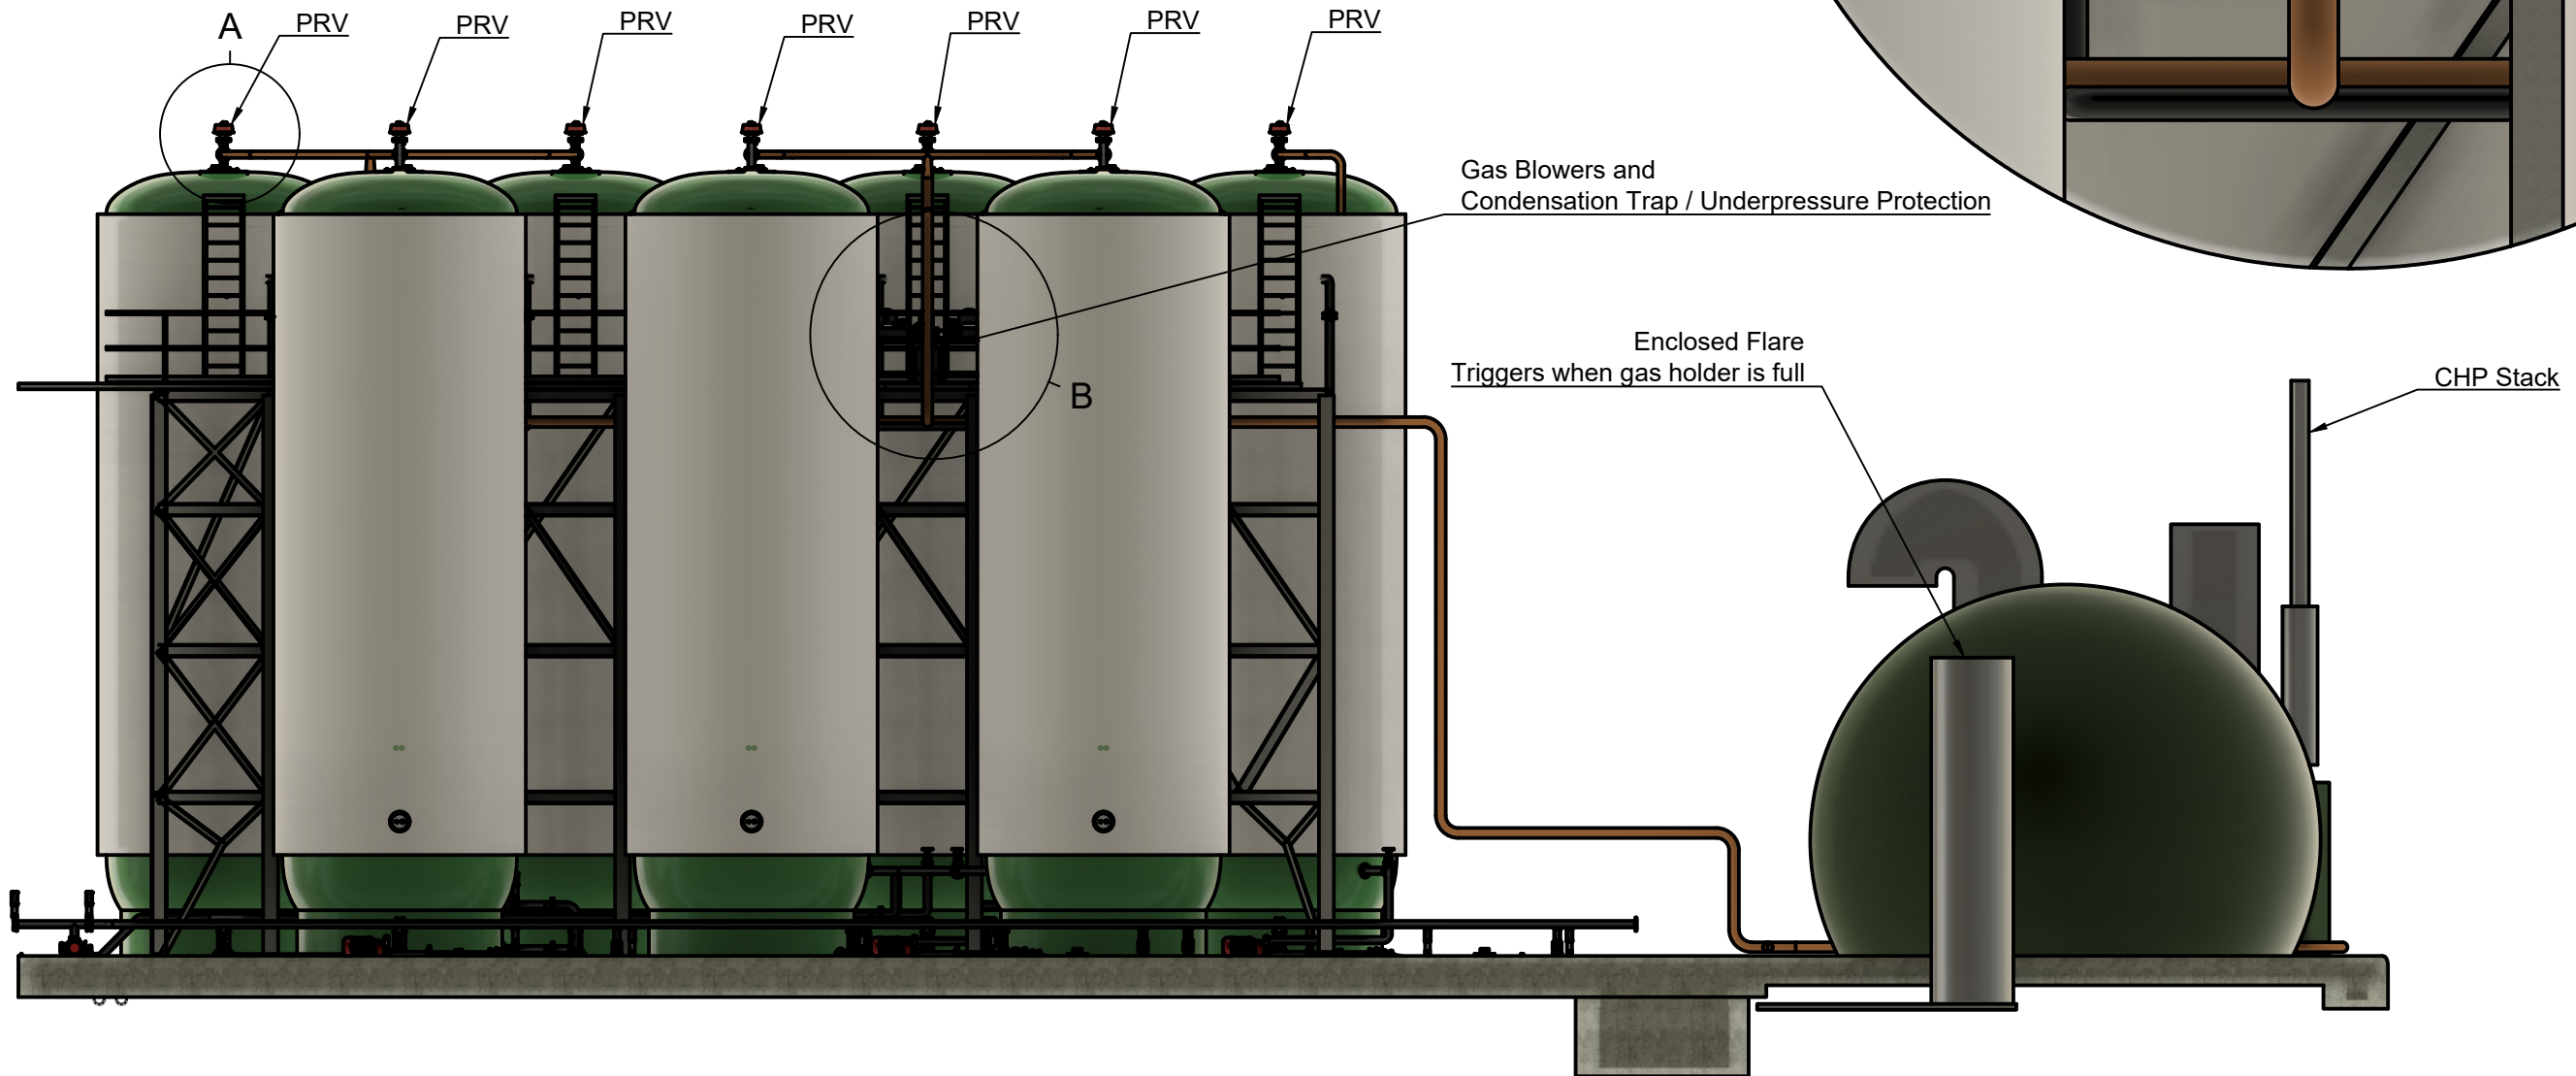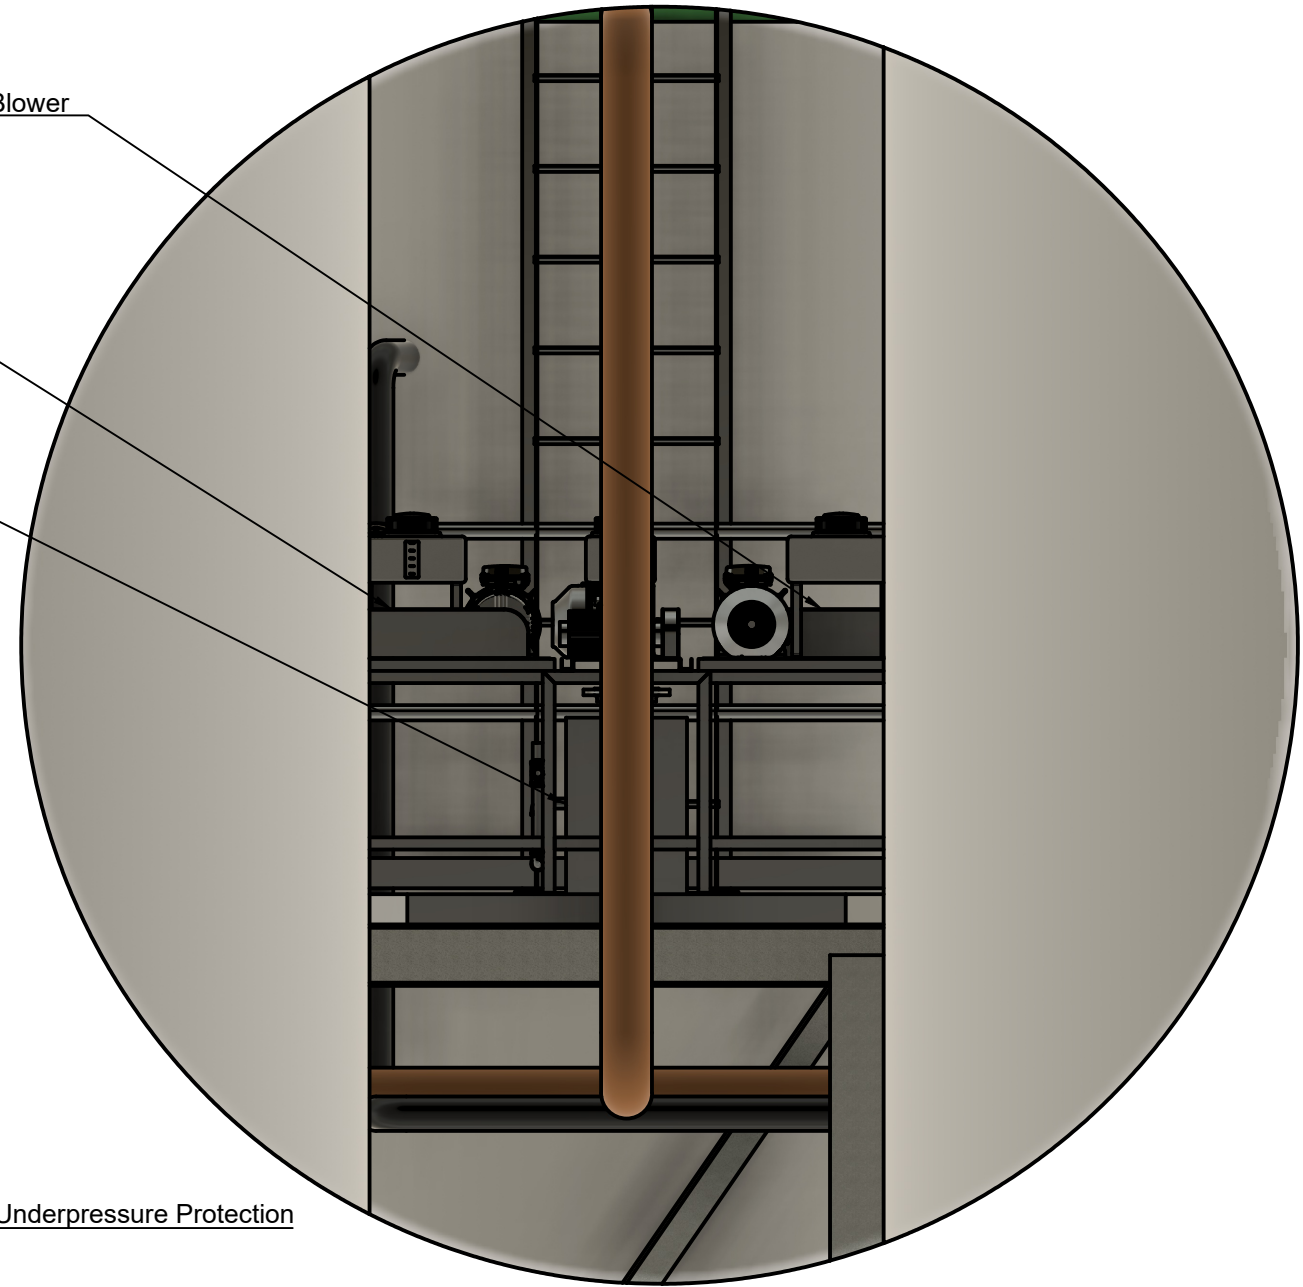


Gas Blowers and
Condensation Trap / Underpressure Protection


Enclosed Flare
Triggers when gas holder is full

CHP Stack

C (1:25)

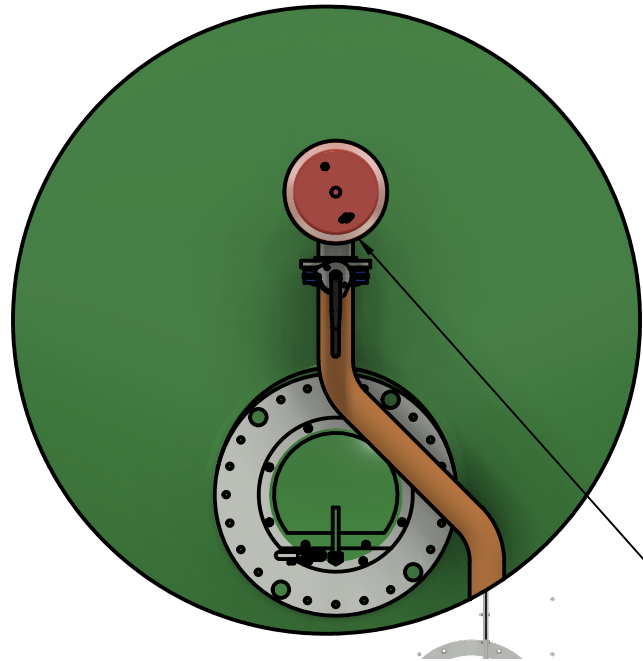

D (1:25)


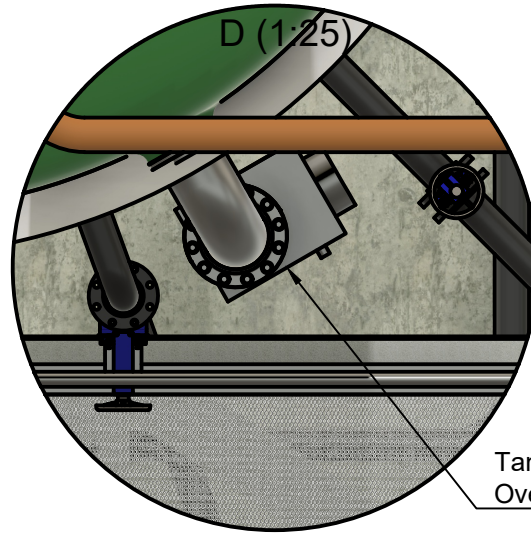


Tank Overflow / Overpressure Protection (FAD)
Overpressure protection triggering at +10mbar

Tank overpressure & underpressure device (PRV)
Overpressure protection triggering at +6mbar
Underpressure protection triggering at -1mbar

Condensation Trap / Underpressure Protection
Underpressure protection triggering at -1.5mbar

E (1:25)

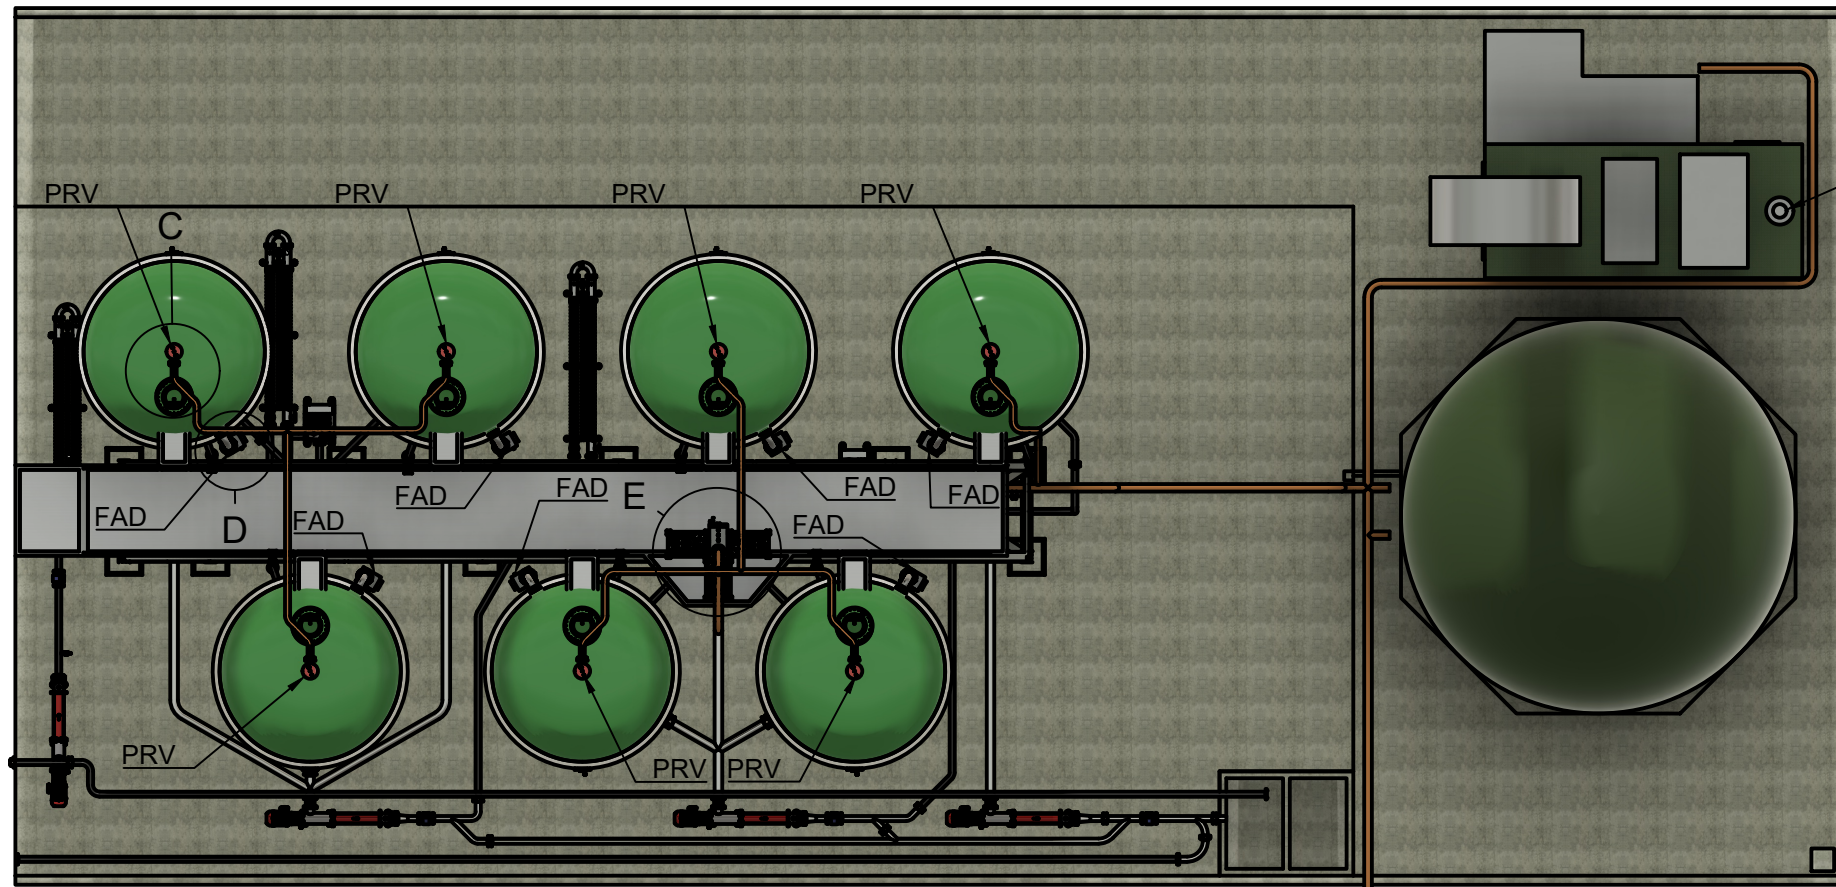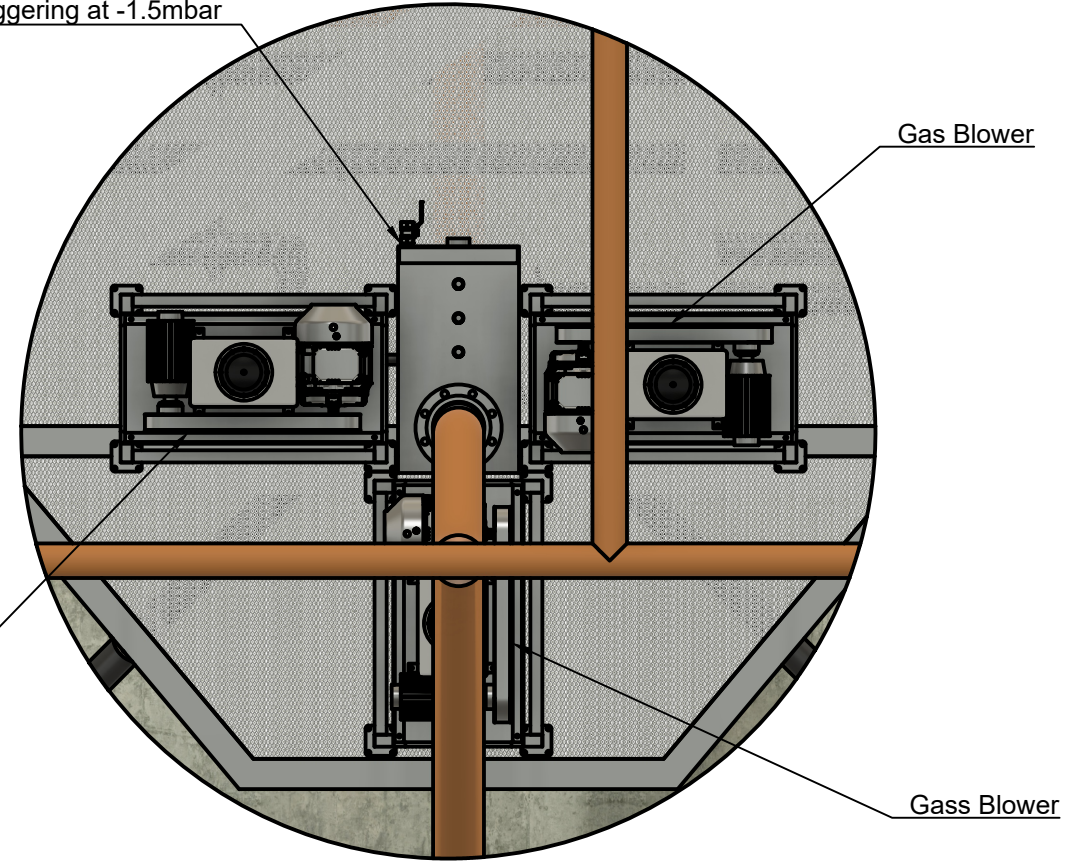

CHP Stack

Enclosed Flare
Triggers when gas holder is full



