
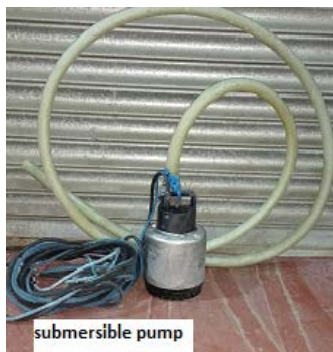


**IF IN DOUBT ASK**

System: Anodising	Area: Anodising Tank (T-12/13)	Op: n/a
Process: Tank Leakage	Description: Anodising Tank-12/13 Leakage Procedure	Sht: 2of 1

**Safety equipments must be worn**

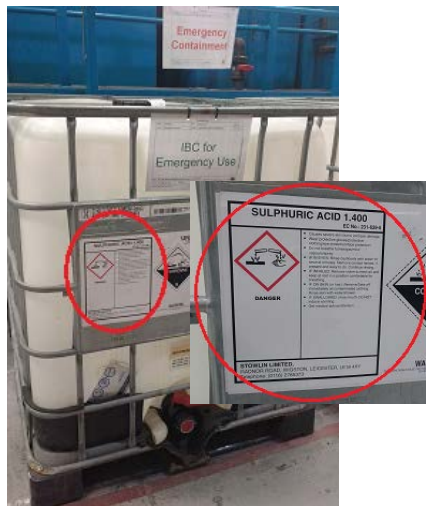

Start transferring sulphuric acid from the anodising tank to Emergency IBC with the help of submersible pump .  
 Use 15 IBC to store all sulphuric acid from the anodising tank .  
 Once tank gets empty , label all the IBC (which tank , which acid ) .  
 Now anodising tank is ready for repair .



Transfer all the IBC to the emergency containment area .

**Coshh data sheet are available for all the chemicals used in the anodising process. Before attempting any maintenance Work on the tanks or chemical handling equipment refer to the data sheet**

Notes:			
Author: N. Mistry	Verified:	Approved:	