


Leak Detection and Repair Plan (LDAR) – Didcot

Document no: TW_STC_EPR_24a_DDT_APPH
Revision no: v4

Thames Water
EPR/AP3542QE/A002

IED Permit Application
22 January 2024

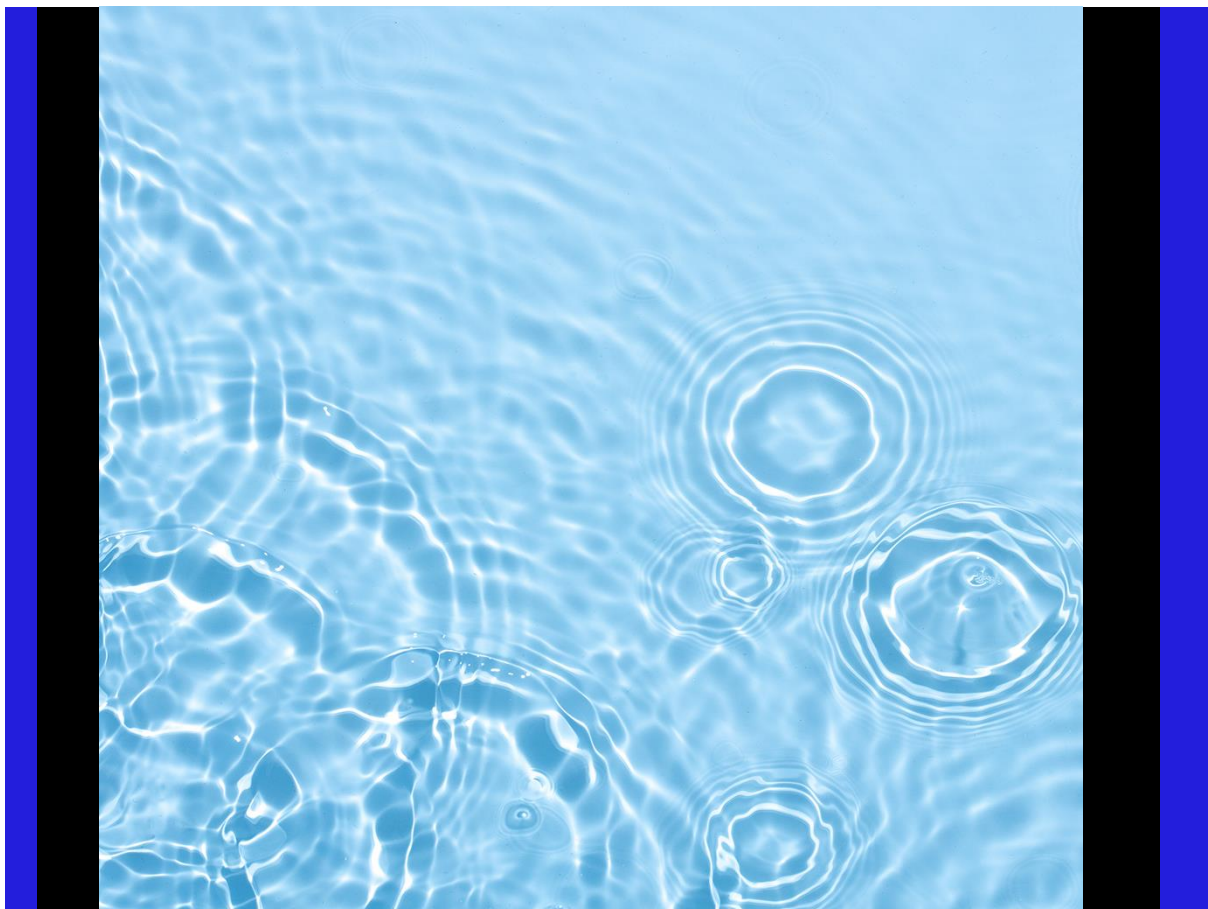

Leak Detection and Repair Plan (LDAR) – Didcot

Client name: Thames Water
Project name: IED Permit Application
Client reference: EPR/AP3542QE/A002
Document no: TW_STC_EPR_24a_DDT_APPH
Revision no: v4
Date: 22 January 2024
Doc status: Final

Project no: B22849AM
Project manager: Harindra Gunasinghe
Prepared by: Tim Jones
File name: TW_STC_EPR_24a_DDT_APPH.docx

Document history and status

Revision	Date	Description	Author	Checked	Reviewed	Approved
1	18/08/22	Draft	TJ	JK	MM	DF
2	27/09/22	Final	TJ	JK	MM	DF
3	13/12/23	Updated for Re-submission	TJ	JK	MM	MM
4	22/01/24	Amended with revised biogas utilisation	TP	JK	MM	MM

Distribution of copies

Revision	Issue approved	Date issued	Issued to	Comments

Jacobs U.K. Limited

2 Colmore Square
Birmingham, B4 6BN
United Kingdom

T +44 (0)121 237 4000
www.jacobs.com

Copyright Jacobs U.K. Limited © 2024.

All rights reserved. The concepts and information contained in this document are the property of the Jacobs group of companies. Use or copying of this document in whole or in part without the written permission of Jacobs constitutes an infringement of copyright. Jacobs, the Jacobs logo, and all other Jacobs trademarks are the property of Jacobs.

NOTICE: This document has been prepared exclusively for the use and benefit of Jacobs' client. Jacobs accepts no liability or responsibility for any use or reliance upon this document by any third party.

Contents

Acronyms and abbreviations	iv
Document Control	iv
1. Introduction	1
1.1 Scope.....	1
1.2 Responsibility.....	2
2. Assets and Monitoring	3
2.1 Identifying Assets	3
2.2 Design Specifications.....	3
2.3 Monitoring.....	3
2.4 Leak Repair	5
2.5 Record Keeping.....	5
2.6 Type and Quantity of Emission	6
2.7 Key Personnel.....	6
2.8 Reactive Leakage Detection Process	6
2.9 Training and Calibration	7

Tables

Table 2.1 – Monitoring Methods and Frequencies.....	4
Table 2.2 - Key Personnel.....	6

Acronyms and abbreviations

EPR	Environmental Permitting Regulation
PRV	Pressure Relief Valve
EA	Environment Agency
VOC	Volatile Organic Compounds
BAT	Best Available Techniques
SHE	Safety Health and Environment
STC	Sludge Treatment Centre
STW	Sewage Treatment Works
TWUL	Thames Water United Ltd

Document Control

This document is due to be reviewed every four years, unless there is a change to the biogas system described in the document.

Revision	Date Issued	Next Review Due	Owner

1. Introduction

The following document describes the methodology used to locate, identify and mitigate against fugitive emissions to air of Volatile Organic Compounds (VOC) and biogas from the permitted activities as part of the Environmental Permitting Regulations (EPR) and Best Available Techniques (BAT) requirements. This methodology benefits the safety protection of site staff and increases productivity and the value of the process, as well as protecting the environment. This document supports the implementation of BAT 14 (h) and is aligned with the Didcot STW Odour Management Plan. Where a Safety Health and Environment (SHE)SHE6 form has been completed, or a SHE39 assessment undertaken, the outcomes should be used to inform how to proceed with biogas investigations and / or monitoring.

Thames Water, in accordance with BAT 14(h) utilise flame ionisation for the detection of leak of biogas, in accordance with 'sniffing methods' as defined in Table 6.2 of the Waste Treatment Best Available Technique conclusions document.

1.1 Scope

This document is applicable to all the permitted activities at the Thames Water Utilities Ltd ("Thames Water" or TWUL) Didcot Sludge Treatment Centre (STC) site, which produces biogas for consumption within one biomethane Gas-to-Grid plant, combustion in the two boilers and two Ground Flare stacks from the anaerobic digestion of sewage sludge, creating a heat source and helping to minimise Thames Water's environmental impact. Note that the final flare design may utilise a single bivalent flare which is capable of sharing one flare stack (one chimney) with two burners inside.

Maintenance requirements to identify fugitive biogas emissions from the following are within scope:

- Biogas pipework and storage including:
 - Welds / joins
 - Seals;
 - Flanges;
 - Valves;
 - Feeding and digestate separation units;
- Biogas Compressors / Boosters;
- Conveyors and presses;
- Reception storage;
- Digestate storage;
- Building containment;
- Biogas Storage system including:
 - Pressure relief valves;
- Condensate traps;
- Primary Digester Tanks including:
 - Roof and cover fixings; and
 - Pressure Relief Valves.
- Biogas upgrader;
- Propane transfer pipework and storage, including:
 - Welds / joins
 - Seals;
 - Flanges;
 - Valves;
- Biomethane transfer pipework, including:
 - Welds / joins
 - Seals;
 - Flanges;
 - Valves;

Across sites, emissions of sludge to the environment tend to be minimal due to the site surface drainage measures in place and regular tour inspections. Therefore, emissions of sludge are not within the scope of this document.

1.2 Responsibility

The Site Manager for the Didcot site is responsible for ensuring the environmental permit conditions are complied with. Responsibility for undertaking the monitoring and reporting of any defects for repair falls to the Operations and Maintenance team for the site.

2. Assets and Monitoring

2.1 Identifying Assets

The following assets are scheduled for routine proactive inspection via flame ionisation detection on an annual basis:

- 2 x Boilers;
- 1 x Biomethane Gas-to-Grid plant;
- 1 x ground mounted Flare Stack [note 1];
- 1 x ground mounted Gas-to-Gird Flare Stack [note 1];
- 2 x Primary Digester Tanks;
- 1 x dual Membrane Biogas Storage holder;
- Pipework;
- Condensate Pots / Traps on the biogas lines;
- Condensate Pots on the biomethane to grid plant;
- Propane storage tanks;
- Pressure Relief Valves (PRV); and,
- Biogas compressors / boosters.

This list is based on the sources where biogas and potentially VOCs are generated; transported; stored and utilised at the Didcot STC.

Prior to commencing any monitoring or inspection, the most recent P&ID plans for the biogas system should be obtained for the Didcot STC, to ensure all relevant pipework, fittings and equipment are identified for inspection.

The primary assets listed above are all uniquely identified with ID numbers except for pipework, which makes them easy to identify by the individual conducting the leak detection monitoring. Therefore, the assets across sites can be scheduled for inspection and identified for repair if necessary. Any new or replacement assets must complete an asset tagging process to maintain an accurate list for each site within SAP. Biogas Compressors / Boosters and valves are utilised, when possible, to reduce the risk of leaks from the system.

Note 1: The final design may utilise a single bivalent flare which is capable of sharing one flare stack (one chimney) with two burners inside. Depending on the final detailed design, there may only be one flare stack asset.

2.2 Design Specifications

All TWUL biogas assets have been built to a design specification (Thames Water, Water Industry [WIMES], national and international standards), which includes an operational lifespan.

For example, the PRVs are fitted with intrinsically safe limit switches which operate when an event occurs (pressure or vacuum relief), in accordance with Thames Water specifications.

All assets are inspected and maintained in accordance with Thames Water maintenance standards which are based on Water industry best practice.

The boilers and biomethane to grid plant are subject to routine inspection and maintenance by specialist contractors.

2.3 Monitoring

The assets mentioned are subject to daily monitoring also, as part of the operator's daily site duties. The Thames Water SHE 6M (visual assessment), which is completed quarterly by the Site Manager, and the site's SHE 39 Biogas Management Plan are examples of monitoring completed on site. Site operational staff are required to wear methane detective personal biogas monitors which detect leakage in the area surrounding the site operator. Human senses (i.e. sight and smell), can also be utilised to detect a potential methane leak in a general area). While conducting visual inspections, the operator will look for signs of degradation of the equipment. These systems would detect any significant leaks within the system.

Gas monitoring training delivered through a Thames Water approved training provider must be completed to be able to use the personal biogas monitors. This training is recorded on staff training records and subject to periodic refresher training. All personal biogas monitors are checked prior to use on site and are periodically externally recalibrated in accordance with manufacturer's requirements.

All PRVs are subject to regular inspection. Heat generation from the boilers is monitored and biomethane injected into the local grid network is also measured, both acting as a proxy for biogas generation. A change in boiler performance or heat exchange input parameters, or a change in the volume of biomethane injected to the local grid network, may be a sign that the digestion process is out of equilibrium or that there is a leak within the biogas system. Process works is undertaken by a local operator and remedial works are completed on pipework or similar by a contractor. PRVs are monitored and if a PRV is activated, operational staff would respond to re-seat the valve as required.

Any alert of potential leakage is reported centrally, and a work order is raised for repair by appropriately skilled operatives. Checks are completed twice a year on Digester asset bases via an external contractor, who provide a report with recommendations for the asset.

If the source of the emission is unknown during the daily monitoring, then Optical Gas Imaging will be requested to complete an assessment to locate the source of the leakage. The responsibility of this falls to a Thermographic Engineer as seen in Table 2.2.

The process flow used when monitoring assets on each site is outlined in training guidance completed to utilise the Flame Ionisation Detector. This detector is a handheld device which can measure both the presence and level of biogas in a sample of ambient air, allowing the presence of leaks to be identified and localised.

The dedicated Biogas Storage holder has the highest potential for the largest immediate volumetric release, noting the presence of a PRV and double membrane design, but residual risks are inherently present across all critical plant. Immediate risk assets would include biogas transport (pipework: valving). Assets with a proportionally lower risk of biogas release would include ancillaries such as biogas boosters or condensate pots (i.e., are essentially sealed within normal use).

An up-to-date DSEAR zoning drawing is held on site and is a routine point of reference in day-to-day working.

Continuous monitoring of biogas pressure takes place within the biogas system which is connected to SCADA and an off-site control room to raise alarms on high or low pressure.

The tasks associated with monitoring the above assets are listed in Table 2.1.

Table 2.1 – Monitoring Methods and Frequencies

Task	Expected Frequency	Method	Priority	Priority Rationale
Inspection of Primary Digester Tanks	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	High	Volume of contained biogas and level detection.
Inspection of pipework between Primary Digester Tanks and Biogas Storage	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Biogas volume contained. Look for degradation of pipework including all joints, flanges, seals and valves.
Inspection of dual membrane Biogas Storage	Every six months	Flame ionisation detector (sniffing), Personal and fixed biogas monitors	High	Operation and Maintenance task.
Inspection of pipework between Biogas Storage and siloxane filter	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Biogas volume contained. Look for degradation of pipework including all joints, flanges, seals and valves.

Leak Detection and Repair Plan (LDAR) – Didcot

Task	Expected Frequency	Method	Priority	Priority Rationale
Inspection of siloxane filter	Every six months	Flame ionisation detector (sniffing), Personal and fixed biogas monitors	Medium	Operation and Maintenance task
Inspection of pipework between Biogas Storage and Boiler	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Biogas volume contained. Look for degradation of pipework including all joins, flanges, seals and valves.
Inspection of pipework between Biogas Storage and Ground Flares	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Biogas volume contained. Look for degradation of pipework including all joins, flanges, seals and valves.
Inspection of pipework between Biogas Storage and biomethane Gas to Grid plant	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Biogas volume contained. Look for degradation of pipework including all joins, flanges, seals and valves.
Inspection of pipework between Propane storage tank and biomethane Gas to Grid plant	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Biogas volume contained. Look for degradation of pipework including all joins, flanges, seals and valves.
Inspection of biomethane pipework between biomethane Gas to Grid plant and grid network	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Gas volume contains. Look for degradation of pipework including all joins, flanges, seals and valves.
Inspection of PRVs	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	High	Operation and Maintenance Task
Inspection of condensate traps	Every six months	Flame ionisation detector (sniffing), Personal biogas monitors	Medium	Biogas volume contained. Look for degradation of pipework and that the condensate release tap moves freely and reseals

2.4 Leak Repair

After a biogas leak is detected, the site monitoring operative informs the Site Manager or Senior Technician via the most appropriate communication method. A safety observation and corresponding action will then be raised regarding health and safety. If required, a contractor will be utilised to ensure the action is completed by a person with the relevant competencies, for example biogas safety. An audit trail will be available via the Thames Water planning tool. The Environment Agency (EA) is to be informed, if applicable, through the EPR permit Schedule 5 notification procedure.

A RIDDOR Dangerous Occurrence would be raised in the case of a serious health and safety incident that met the requirements.

2.5 Record Keeping

As mentioned above, all biogas assets on each site are uniquely identified and an electronic site register is available and kept up to date (SAP). Leak detection activities are assigned to a person appropriately trained

using the site asset list via the MAMS system. After inspection, an electronic record is made of all checks completed and any follow up work which would be required is assigned to another appropriately trained person. Any work which is outstanding will be flagged as "mandatory work" on SAP, which is monitored monthly to ensure full completion.

2.6 Type and Quantity of Emission

It is likely that any fugitive emissions will be non-combusted biogas, since all combusted biogas is emitted via a point source emission directly from the combustion unit i.e. the boilers or ground flare stacks. Non-combusted biogas accounts for most of the stored biogas and is made up of Methane (60-70%) and Hydrogen Sulphide (50-<100ppm). The quantity emitted will be variable depending on:

- The location of the emission source i.e., a hole in a biogas storage vessel could potentially release a large quantity compared to a length of isolated pipework;
- When the leakage was detected;
- Duration of the leak prior to repair; and
- The pressure of the contained biogas.

An assessment will be carried out to quantify the release as far as practicable, including a consideration of the potential time period the leak has occurred over (based on visual and other inspections), the pressure and flow in the component with the leak in it, and the asset involved.

Any unmonitored releases receive immediate consideration as a component part of the incident response following the reporting of a biogas release to the TWUL Pollution Desk. Where resolution of the underlying issue is not immediate but instead of unknown duration, the views of approved persons (e.g. DSEAR Engineer; Health and Safety Advisor; other subject matter experts) would be sought to determine what would be practicable and safely deployable. Framework contractors would be contacted to provide input to defining monitoring methods, at appropriate frequencies, in any circumstances where the need for data resolution is higher than TWUL instrumentation and/or potentially needed longer term, including on odour.

2.7 Key Personnel

Those responsible for the implementation of the LDAR plan are outlined in section 1.2. A more detailed list is shown in Table 2.2 below.

Table 2.2 - Key Personnel

Title	Responsibility
Site Manager / Senior Technician	Ensuring the LDAR is implemented, site repairs are carried out in a timely manner by the onsite maintenance team. Responsible for reporting issues to appropriate authorities.
Site Operators	Operation of site assets, detection and reporting of leakage if discovered during out site duties.
Thermographic Engineer (Contractor)	Undertake site-based leakage monitoring and raising any leaks to the site management team.

2.8 Reactive Leakage Detection Process

There are occasions where additional requests to monitor for biogas emissions are directed to the team. For example, when new assets are installed, and leakage checks are required before putting back into operation. The same processes as above are followed for monitoring and escalation.

2.9 Training and Calibration

Any members of staff involved in leak detection using specific equipment are trained in the use of that equipment and all relevant Health and Safety requirements. For example, DSEAR awareness before attending a site. Specialist equipment, such as the flame ionisation detector, are calibrated according to the recommendations of the manufacturer.